# Victorious Manual 2025



# **Version and Credits**

This version dated 10 Aug 2025 by Giles Williams replacing a May 2021 revision of the original manual from May 2000 is based on a draft approved after the 2020 AGM.

We are grateful for the contributions made to this manual by all members of Victorious's syndicate.

## Breakdown Essentials:

**River Canal Rescue (emergency engineers):** 

RCR phone number: **08000-718021** RCR membership number: **108895** 

# **Contents**

Victorious Manual 2025	T
Version and Credits	2
Breakdown Essentials:	2
Contents	3
Introduction: Welcome to Victorious.	4
Victorious, from stem to stern.	5
Maintaining and running Victorious	9
<ul><li>On receiving Victorious from turn-round:</li></ul>	10
<ul> <li>Daily checks and tasks before running the engine:</li> </ul>	11
<ul><li>Starting the engine:</li></ul>	14
<ul><li>Using the bow thruster:</li></ul>	16
<ul><li>Stopping the engine:</li></ul>	16
<ul><li>Daily tasks after running the engine:</li></ul>	16
Checks and tasks at turn-round (leaving the boat):	17
Possible running problems and their solutions:	18
Solar Panels and LiFePo4 Batteries	19
Advanced Use and Information:	19
Bluetooth Mobile Phone Apps:	19
Folding down the Rear 'Pram Hood' Cover	20
Using Victorious in Winter	
(adapted from BCBM notes)	21
On board	21
Ice	21
Winter stoppages	21
Safety	22
Before Turn-round	22
At Turn-round	22
Central Heating & Hot Water	23
Bedding and towels aboard Victorious	24
Cleaning Victorious	25
Example Turn-round Sheet	28
Turn-round Checklist	29
Before leaving Victorious	29
On joining Victorious	29

An inventory of everything aboard Victorious is taken periodically and can be found in a separate document.

Information about Victorious's current berth is also in a separate document.

### Introduction: Welcome to Victorious.

Narrow boat Victorious was launched in the year 2000 as part of the Challenger group of shared boats. It's been with several boat-share management groups, but is currently self-managed by its owners. Victorious is 60 feet (18.29m) long, 6 foot 10 inches (2.08m) in beam, and powered by a 43hp Nanni diesel engine.

Your boat is shared between up to thirteen groups of owners, twelve of which have a four week share, and one group which has a two week 'half share'; this is the 'Victorious syndicate'. We're a varied bunch of couples, families and friends, who meet at least once a year for our annual AGM. Together we enjoy sharing the responsibility for managing and maintaining Victorious.

This manual should be a helpful guide to your time on board Victorious. It lists everything that is on the boat or part of it, and is a short guide to how everything works. It's not complete, you will also be gaining knowledge of the boat and how it works through your holidays, and through your interactions with the rest of the owners.

If you are new to canal boating then I'm afraid you won't find much advice in this manual. If you're inexperienced then we suggest that you don't plan too challenging a trip for your first time out. You should take your time, learn how to handle the boat and how to safely operate locks and bridges. Both the **RYA** and the **Canal & River Trust** publish canal boating handbooks, there are copies aboard, and these are a great guide for beginners. You should also consider the RYA Inland Waterways Helmsmanship course. And the other members of the syndicate will also be glad to offer their advice and help - you should have their names and phone numbers already!


Although the information here is quite dense, and sometimes daunting, the two main sections of this manual (**Maintaining and Running Victorious** and **Cleaning Victorious**) are arranged in a suggestion of the order of what needs to be done, so that you can simply work through them item by item.

In another folder on the boat you will find the manufacturer's operating instructions for much of the equipment on board. There's also a file containing copies of the "Turn-round Report" sheets - one of which must be completed at the end of every week aboard to let the syndicate know about any issues or faults that need addressing. You should also have a sheet that lists the services and contact numbers for the cleaners and engineers at Victorious's current marina.

This year Victorious celebrates twenty years afloat, and some of the original share owners are still with us. We hope you'll enjoy your time aboard as much as we all have.

For the Victorious syndicate, Paul Newton, Chair 2020 - 2024.

# Victorious, from stem to stern.

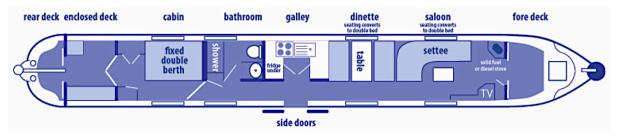

#### **Bows:**

Bow fender ('vee' style) secured with four chains.

Tee cleat:

Forward mooring line

Gas Locker:

LPG bottles (two or three)

LPG Spanner (on a bit of string)

LPG fittings

LPG Switchover/Regulator

Labels for current and reserve bottles.

Tunnel Lamp Support:

12V Horn

Tunnel Lamp

Demountable cratch with two window panes

Demountable vinyl cratch cover with two clear panels

#### Forward deck (Well deck):

Gear oil reservoir for bow thruster

Attachment point for anchor, chain and warp

Anchor, anchor chain and anchor warp

Bow thruster access hatch

Desmo mounting for small table

Water fill port and vent

Forward wooden lockable doors into saloon

Plastic box for stove fuel

Hose to fill water tank

Chimney cover (or chimney) for stove

Metal bucket for stove ash.

#### Roof:

Mushroom vents:

two forwards centre, two midships port, one each side of the rear hatch

Solar Panels x3 with connections running to vent aft.

Chimney (or chimney cover) for stove

#### Aerials:

One radio aerial forwards starboard, one radio aerial aft port

One demountable TV aerial.

Steel hoop at centre, midships:

Two centre lines

Steel door over the centre side-hatch doors

Steel supports for:

Boarding plank

Barge pole

Boat hook

Mop and Broom (external use)

Steel sliding rear hatch cover

#### Port gunwale:

Pump out port for toilet holding tank

#### Saloon:

Two windows (slide opening)

Desmo fittings for the table

Steps with storage area behind containing the water pump

Lockable, wooden doors out to foredeck

#### Starboard:

Wardrobe

Clock and Victorious Emblem

TV & DVD player

Storage with glassware, first aid kit, DVD's and books

Magazine rack with manuals and paperwork

Large table / Bed section in wall support

230V socket, 12V 2 pin socket, 12V cigarette lighter style socket, USB socket

#### Port:

Solid fuel stove with storage in raised plinth

Storage for three Desmo legs

Settee, converts into double berth with large table

Under-settee storage with bedding

#### **Dinette:**

Two windows (sliding opening)

Seating with storage drawers and areas beneath

Table with Desmo fitting below

(seating and table convert into a double berth)

Thermostat control for central heating

#### Galley:

One window (hopper style)

Double-door side-hatch and steps

Side-hatch cover stored to one side

Additional galley work surface stored to one side

Microwave with shelf over

Drawers with cutlery, tools and cloths

Sink Unit and four burner hob

Under-sink storage cupboards with cooking utensils and small waste bin

Fridge

Oven and grill with shelf over

Inverter/Charger control

#### **Connecting corridor:**

Door into bathroom

Door into rear cabin

One window in corridor (hopper style)

Wardrobe

#### **Bathroom:**

Door into connecting corridor

One frosted window (hopper style)

Vanity sink with storage below

Bathroom cabinet

Drop-through toilet into holding tank:

Water valve and shut off valve for the toilet

Shower with shower drain pump switch

Small set of shelves

#### **Rear Cabin:**

Door into connecting corridor

Two windows (hopper style)

Double berth, extendable with storage underneath for:

Tool kit

Shore-line power cable

Vacuum cleaner

Shelf over the bed with radio and USB socket built in

Coat-hook on bedpost

Starboard:

Small shelf over radiator

Vanity with sink:

Mirror over

Towel ring

Storage underneath:

Wheel-valve (shut off) for radiators.

Small safe for valuables

Inspection hatch for cabin bilge

Port:

Wardrobe:

Clip for storing tiller arm

Storage for aft 'tonneau' cover

Central heating control panel

Electrical cupboard with various controls and key hooks:

(see separate diagrams) Electrical inverter below

USB socket (with domestic circuit voltmeter) above

Steps, sliding hatch and doors out to enclosed deck

#### **Enclosed rear deck:**

Steel doors and hatchway into rear cabin

Boards over engine bay

Starboard:

Fold-down step to roof

Seat with tool locker below for:

Windlasses

Mooring gear (fenders, pins, chains, hooks, hammer)

Port:

Shore-line power connector

Hook to support:

Perry buoy (life ring)

Control column

(see separate diagram)

Steel doors to rear deck

#### **Engine bay:**

Engine and gearbox:

(see separate diagrams)

Weedhatch

Starboard:

Storage for engine consumables

Stern gland greaser

Port:

Battery box and isolation switches

#### **Counter deck:**

Door to weed-hatch

Tiller swan-neck and rudder bearing

Aft line

Rear 'button' style fender attached with four chains

Starboard:

Aft-line dolly with fuel-tank vent

Port:


Diesel filling port

Aft-line dolly

# Maintaining and running Victorious

There are a few maintenance tasks that every user of Victorious should perform, some are everyday checks if you are cruising, some are chores to be performed before turn-round, and some are ways of dealing with the most common sorts of problems.

Please read this short section on operating Victorious, and consult the check lists at regular intervals.

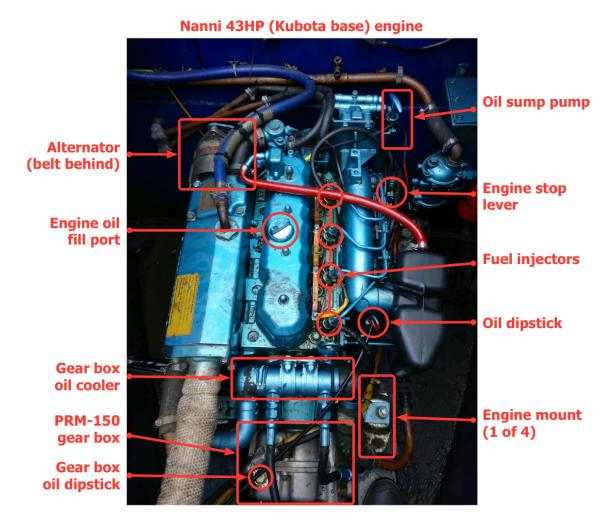

Victorious's current engine is a 43hp Nanni diesel based on a Kubota industrial engine. This engine dates from 2001 when it replaced Victorious's original engine, which I understand to have been an identical model. As an ageing engine, it requires a little care when operating.

#### On receiving Victorious from turn-round:

- Read the latest turn-round reports on the website and in the folder for updates on any issues.
- Check the gearbox oil level by unscrewing the brass nut on top of the gearbox marked with the small black dot shown, and removing and examining the gearbox dipstick. If the level is okay, replace the dipstick and nut and tighten it only finger-tight, so that any syndicate member can check this level.



- If the gearbox oil level is below the bottom mark, with a funnel add small amounts of engine oil (15W40 multigrade) through the hole for the dipstick until the level is correct. Report this action on the turn-round form.
- If the gearbox oil level is above the top mark, make a note and report this on the turn-round form. The engineer should deal with this at the next service.
- Check the level of hydraulic fluid at the sight gauge in the large reservoir for the bow thruster on the starboard side of the engine bay.
  - If necessary, top up the hydraulic oil (ISO-32 Hydraulic Oil)



- Examine the engine mounts for wear.
  - **If the engine mounts are worn or loose**, note this in the turn-round sheet and contact the syndicate for advice.
- Ensure the battery isolation switches are in the 'ON' position.
- Switch on any services you need at the electrical control panel in the rear cabin.
- If you require 230V AC power (eg. for the TV) turn on the inverter by moving the toggle switch from 'charger only' to 'on'.

- Check the level of any water in the cabin bilge (below the inspection cover in the rear cabin wardrobe.)
  - If there is more than a few millimetres of water, this will need to be removed with a hand or battery pump, or with a sponge and bucket. Please report this on the turn-round form.
- Check the level of the gear oil for the bow thruster at the reservoir bottle in the forward well deck. The bottle should be full to between the minimum (MIN) level and the metal strap.
  - Top up the gear oil (EP-90 Hypoid Gear Oil) as necessary.



 If you are intending to cruise, disconnect and stow the shoreline power supply cable on board.

#### • Daily checks and tasks before running the engine:

- Grease the stern gland by turning the handle on the greaser clockwise until some resistance is felt, and then making a further quarter turn.
  - If the handle is turned all the way down, and will turn no further, you will need to refill the greaser with grease:
    Wipe the barrel and handle of the greaser clean of any grease with a paper towel or blue roll.

Unscrew the whole barrel from its mounting on the bulkhead, a rubber glove will help you grip the barrel.

Take the lid off a tub of **Morris K99 grease** and place the tub on a non-slip surface.

Place the barrel's open end against the grease in the top of the container, and with a gentle pressure into the grease, wind the handle back up, drawing the grease into the barrel. There is usually a plastic ring in the tub that will help guide the grease into the barrel.

When the handle is wound all the way up remove the barrel from the tub of grease and wipe it clean. Then screw the barrel of the greaser back into its place on the bulkhead.

Finally, wipe any excess grease from the barrel, handle and bulkhead.

- Check the stern gland for water ingress. Before cruising there should be no more than one drop of water per minute entering the bilges through the stern gland.
  - If more water is entering from the stern gland, it may need adjusting. This will require spanners or wrenches.

    Loosen any locking nuts and tighten both nuts holding the stern gland packing in place by just one quarter turn. Then retighten the locking nuts. Note this adjustment on the turn-round sheet.
  - If the nuts cannot be tightened any further, then the stern gland will need repacking at the next service. Note this on the turn-round sheet.
- Check the engine oil level by removing the dipstick from the engine, wiping it, pushing it all the way back into the engine, then removing it and reading the level. If the oil is a normal colour (between golden and black depending on when it was last changed), and is between the marks on the dipstick, replace the dipstick in the engine and proceed.
  - If the oil looks at all 'milky', stop and contact an engineer ASAP.
  - If the oil is below the bottom mark, add a small amount (about half a cup) of engine oil (15W40 multigrade) at the oil filler cap. Then read the oil level again, and repeat this until the oil is between the marks.
    - If you have to add oil more than one day in a row, or if oil is appearing on the engine or in the bilge, contact an engineer.
  - If the oil is above the top mark, you should remove some oil from the engine.
    - Remove the hexagonal cap from the oil sump pump, and the cap from the oil filler and keep them safe.
    - Into a disposable container (an old drinks bottle, or empty oil bottle), pump out engine oil until the oil level is correct.
    - Replace both the cap for the oil sump pump and cap for the oil filler.
- Examine the coolant level in the expansion tank on the engine bay bulkhead.
   The coolant level should be between the minimum and maximum marks on the tank.
  - If the coolant level is below the bottom mark, add coolant to the expansion tank. Coolant is a 50/50 mix of blue glycol antifreeze and clean water (ideally, warm water from a boiled kettle.) Coolant is often kept ready-mixed among the engine consumables, if there is none, then you will have to mix it yourself.
  - If the coolant level is above the top mark, excess coolant may overflow and contaminate the bilges. You can drain the expansion tank into a disposable container by removing the hose and hose clamps below the tank, but be sure to reattach them before running.

- Examine the belt for the alternator and water pump at the forward end of the engine. It shouldn't look frayed, and there should be no more than 1 cm of movement if you push a finger in at the longest part of the belt.
  - If the belt is badly worn or broken, it must be replaced before you proceed.
  - If the belt is loose or noisy, it needs to be adjusted.

    Adjusting or replacing the belt requires a little familiarity with the task.

    If you are at all unsure, contact the syndicate or an engineer for help before proceeding.
- Clear any water in the bilges either side of the engine and around the stern gland, by running the bilge pump until water stops leaving the bilge. Please leave the bilge pump switch in the 'automatic' position.
  - If the water in the bilge is oily, you will have to remove the bilge pump hose from where it connects to the outflow through the hull, and run the pumped bilge into a large container suitable for the disposal of contaminated fluids. Reconnect the hose afterwards. Be sure to clean the bilge of any contamination with white, oil-absorbent pads, or with disposable nappies.

#### • Starting the engine:

- o First, attach the tiller arm to the swan neck with the tiller pin.
- Follow the instructions below:



### **Adjust The Throttle**

- **1.** With the throttle lever in the idle position, pull out the lever base to disengage the drive
- 2. Turn the lever forwards, 90°



#### **Switch On**

- 3. Insert the ignition key
- **4.** Turn the key to the **ON** position

A warning tone will sound and the oil and battery warning symbols will light up red.



#### Warm The Glow Plugs

**4.** Turn the key to the **HEAT** position and hold it there for five to ten seconds

The glow plug symbol will also light up green.



#### Start

- **5.** Turn the key to **START** position and hold it there until the engine begins running
- **6.** Release the key so that it returns to the **ON** position

All warning lights and sounds will stop.



- **7.** Move the lever back until the meter shows 1100 RPM to warm the engine or charge the batteries
- **8.** Return the lever back to the idle position to engage the drive

DO NOT RUN THE ENGINE WITH THE KEY AT THE '0' POSITION, OR WITH THE KEY WITHDRAWN

Press the button to stop the engine.

#### • Engaging forward gear:

- Starting with the throttle lever at the 12 o'clock, idle position.
- Move the throttle lever forwards until forward gear engages.

#### • Engaging reverse gear:

- Move the throttle lever to the 12 o'clock, idle position.
- Pause for a breath.
- Move the throttle lever backwards until the reverse gear engages.
- When you wish to resume forward gear:
  - Move the throttle lever to the 12 o'clock, idle position.
  - Pause for a breath.
  - Move the throttle lever forwards until forward gear engages.

Avoid changing directly from forward to reverse gear (or back) without a pause at neutral as this can damage the gearbox.

Reduce speed in situations where you might anticipate any contact; a small bump may be much less expensive than a gearbox repair.

#### Using the bow thruster:

- Victorious's bow thruster is hydraulic and can be operated to move the bows to the port and starboard with the red and green arrow buttons on the control panel.
- The bow thruster provides excellent control when reversing slowly and when manoeuvring at low speed in close quarters.
- You should release the thruster button and pause for a breath before changing the thruster direction to allow the thruster propeller to 'spin down' before reversing its direction.
- The bow thruster will not burn out if operated continuously, but for good form do not use it for longer than a minute at a time.
- If fighting wind, or a current, then extra power can be sent to the bow thruster by increasing the engine speed while in neutral. Pull the throttle lever out (to starboard) to disengage the gearbox, and push it forward to increase engine speed. Use this extra power sparingly, and only when necessary.

#### Stopping the engine:

- Move the throttle lever to the 12 o'clock, idle position, in neutral.
- Press and hold the 'STOP' button until the engine stops. If the engine does not stop after a few seconds, follow the procedure below.
- Once the engine has stopped, release the 'STOP' button, turn the ignition key to the 'O' (stopped) position, and remove it.

#### If the engine will not stop with the 'STOP' button:

- Keep the ignition key in the **'ON' (run)** position.
- Clear the deck of any people and raise the engine covers.
- Carefully locate the small engine-stop lever on the starboard side of the engine, halfway down, near the oil pump-out lever, between the throttle cable connection and the engine-stop solenoid.
- Move the lever forwards and hold it there, this will safely cut off the fuel supply to the engine until the engine stops. You can then release the lever. Replace the engine covers.
- Turn the key back to the **'0'** (**stopped**) position and remove it.
- Report this fault immediately. If you feel assured that you can stop the engine in this way then you may return Victorious to base, otherwise stay where you are and contact an engineer.

#### Daily tasks after running the engine:

- Remove and stow the tiller arm and tiller pin.
- Grease the stern gland as you did before cruising.

#### Checks and tasks at turn-round (leaving the boat):

- At the service point:
  - Ensure the toilet tank is pumped out, rinsed, and empty. Please add green (organic) chemical toilet fluid through the pump out port, not the toilet.
  - Refill the diesel fuel tank.
  - Replace any empty gas cylinders.
- Moor the boat securely with the forward and aft lines, using fenders to protect the sides.
- Ensure the shoreline power supply cable is connected according to the marina's instructions, and that you have mains power. Switch the inverter to 'charger only.'
- Coil the centre lines on the roof.
- Ensure the boat is tidy and cleaned inside and outside. (See the section on cleaning.)
- Refill the domestic water tank.
- Ensure the front cratch is mounted and the cratch cover in place.
- Check that the propeller is clear of any weeds or debris:
  - Stop the engine, if it's running, and place the ignition keys in your pocket.
  - Lift the weedhatch cover door.
  - Loosen the weedhatch securing bar, then remove it from its hoops. Place it safely to one side.
  - Lift the weedhatch cover out of the weedhatch, take care, it is quite heavy. Place it safely to one side.
  - Carefully examine the propeller and prop shaft where it exits the hull, remove any weeds and debris from around the propellor and shaft. You may wish to use pond gloves or sleeved chemical gloves. Debris that can't be easily removed should be cut away with shears or a serrated knife.
  - Dispose of any rubbish or weeds from the weedhatch thoughtfully.
  - Replace the weedhatch cover and tighten the securing bar.
  - Start the engine, and while tied up, run the engine in forward and reverse to check that the weedhatch cover does not leak. If any water bubbles through then stop the engine, *pocket the keys*, and reseat the weedhatch cover and retighten the securing bar. Then test it again until it does not leak.
- Complete the turn-round form. Copies should be sent to the Treasurer and Technical Officer.
- Receipts (for gas, electricity, toilet chemicals etc.) should be sent to the Treasurer.
- Contact the next syndicate member to let them know you are leaving the boat.
- Switch off services at the electrical control box in the rear cabin.
- Secure the tool box on the rear deck with the padlock.
- Lock the front doors.
- Secure the side hatch and door with its bolts.
- Ensure you have taken all your personal items from the boat.
- Ensure the boat's ignition keys and other keys are safely stowed in the electrical control box in the rear cabin.
- Turn the central heating control dial clockwise to the 0° position.
- Secure the rear cabin doors with the padlock.

#### Possible running problems and their solutions:

- No forward motion but the engine is okay, with muddy water around the boat, or the sound of a collision.
  - You have most likely gone aground. Try to reverse smartly off. If that fails, use the barge pole to push the stern of the boat into deeper water and then try to reverse off. Moving people toward the stern or onto the bank may allow the boat to refloat, sometimes gently rocking the boat from side to side may also help while reversing.
- Lack of forward speed and steering authority, possibly with a vibration at the tiller and frothing around the prop, possibly with the engine overheating.
  - It is quite likely the prop is fouled. Stop the engine and as best you can (using the barge pole, if necessary) come to the bankside. Switch off the engine. Check the propeller for weed and debris as above.
- Engine will not increase speed above tickover, possibly with a loose feeling throttle lever.
  - This is quite likely due to a failed or disconnected throttle cable.
     Continue at tickover until you can moor up, then call an engineer.
- Engine will not engage gear, possibly with reverse gear still working.
  - There may be a lack of gearbox oil. Come to the bankside. Switch off the engine and check the gearbox oil level. Look for debris in the oil.
  - If gearbox oil level is fine but there are metal particles in the oil, or the oil is milky, the gearbox may have broken. Call an engineer.
  - If the gearbox oil is okay and gear still won't engage then the gear cable may have failed or become disconnected. Call an engineer.
- Engine alert warning sounds with battery warning light on.
  - Pull over. Stop the engine and check the alternator belt as above. If the belt is fine, or you cannot adjust or replace it, call an engineer.
- Engine alert warning sounds with oil warning light on.
  - Pull over. Stop the engine and allow it to cool for 10 minutes, then check the engine oil level. If the oil level is okay and the engine alarm still sounds when running, call an engineer.
- Engine alert warning sounds with temperature warning light on.
  - Pull over. Stop the engine and allow it to cool for 30 minutes, then carefully check the coolant level. If it is okay and the engine still overheats, call an engineer.

# Solar Panels and LiFePo4 Batteries

Three 215W solar panels have recently been installed (December 2024) along with a Victron MPPT controller, and two Ecotree LiFePo4 150AH domestic batteries.

These replaced a bank of four 100AH Lead Acid domestic batteries that have a typical life of three years with the use that the syndicate makes of them.

Most users should not notice any difference, except that the batteries should last a bit longer without charging, and that the batteries have about twice the expected lifespan of the Lead Acid type. During summer months the solar panels should keep the batteries topped up.

At turn-round please wipe the solar panels with a damp cloth to avoid any build up of grime.

#### **Advanced Use and Information:**

The solar panels are on adjustable brackets, you can carefully raise, lower and adjust the angle of the panels by supporting the panel and carefully loosening the knobs at each end and sliding them within the bracket.

Do not allow the forward panel to rest on the mushroom vent below it.

Angling the solar panels towards the sun increases the amount of electricity generated.

#### **Bluetooth Mobile Phone Apps:**

The Victron MPPT controller (in the bedroom wardrobe) can be read and controlled by the "Victron Connect" mobile phone app that connects to it via Bluetooth. Please use this for information only and do not change any of the current settings. You will need the PIN number printed on a sticker on the MPPT controller to connect.

https://apps.apple.com/us/app/victronconnect/id943840744

https://play.google.com/store/apps/details?id=com.victronenergy.victronconnect

The batteries can each be examined using the "XiaoXiangElectric" mobile phone app that connects to them via Bluetooth. Look for **VictoriousBatt1** and **VictoriousBatt2**.

https://apps.apple.com/us/app/xiaoxiangelectric/id1576622653

https://play.google.com/store/apps/details?id=com.jiabaida.little\_elephant

# Folding down the Rear 'Pram Hood' Cover

#### Please, always fold the rear cover down before cruising.

It will be severely damaged if you hit a bridge or any low hanging branches.



- 1. Carefully roll up the rear panel and secure it with the straps.
- 2. Carefully roll up the front panel and secure it with the straps.
- 3. Remove the side panels.
- 4. This can be done from the back deck, starting at the back and working forward. Roll each panel up and place them on the hatch. Place them on the same side as they came from, so you remember which goes where. Try not to crease the clear panels.
- 5. Release the cover fixings on both sides at rear and then rotate the cover forward to lay on the roof. It will need a bit of practice to work out how to keep the side wings of the front section from going over the side of the handrail. Try to stop any clear panels from creasing if you can. The cover is best lowered by two people as it can descend quickly, particularly when windy.

#### Watch your fingers when it is lowering!

- 6. There is a strap hanging on the port side that you can fix over the folded cover to stop the wind lifting it. Attach this to the fittings on both sides.
- 7. Raising the hood is the reverse procedure.

# Using Victorious in Winter

(adapted from BCBM notes)

During Winter there may be a few extra things to do while on board and at turn-round.

#### On board

Please be prudent in your use of electrical power and only use high power items like the vacuum cleaner, microwave, and devices like kettles, toasters, electric grills or heaters while the shore power is connected or the engine is running with the inverter on.

Please ensure **daily** that the Central Heating expansion tank has sufficient coolant mix.

Do not allow the batteries to run low. If your cruising day is shorter than six hours, and you are away from shore power, please run the engine at about 1200 to 1500 rpm for as many hours as will make up the difference. You should pull the control lever outwards to disengage the drive while doing this, but please make sure the key is in the ignition and turned to the first position to ensure that the alternator functions properly and the batteries charge.

**Do not run the engine in gear while moored** - this idea (once relevant to older diesel engines) is no longer considered good advice and will be a breach of our licence terms and conditions.

Turn off any unused circuits at the electrical control board whenever possible, especially when leaving the boat.

#### Ice

Please do not cruise through thick ice. Ice thicker than 10mm (three eighths of an inch) will hinder your ability to turn the boat and will cause wear to the paintwork. If long periods of sub-zero temperatures are expected, it may be best to stay in the marina, connected to shore power.

Frozen conditions will also affect the effectiveness of the propane supply, and may even freeze the water taps from which Victorious is topped up.

#### Winter stoppages

Please check your route ahead of time as there may be Winter closures of locks and facilities for maintenance.

#### Safety

Please remember to be extra careful about slippery surfaces in the Winter. It is always safer to move though the boat rather than along the gunwales or the roof. Lock sides and lock gate crossings will be treacherous, move slowly, and always use the handrails.

If you fall into icy water the cold shock will make it difficult to do much for the first few seconds. You will then have only a few minutes to rescue yourself before the cold robs your muscles of any strength. It is a good idea if you are alone on deck in Winter to wear a well-fitting lifejacket or buoyancy aid.

#### **Before Turn-round**


Contact the next owners and determine when (and if) they will arrive at the boat. If there is less than a day where the boat is empty then nothing out of the ordinary needs to be done.

#### At Turn-round

If the boat is to be left empty overnight, or for several nights when frost is expected, it will be necessary to arrange for the boat to be heated to avoid pipes becoming frozen. Please make sure that the shore power is connected and has at least £20 of credit.

When leaving the boat make sure that the central heating thermostat is set somewhere between 0° and 5°. This will help keep the batteries healthy and stops pipes from freezing.

# **Central Heating & Hot Water**

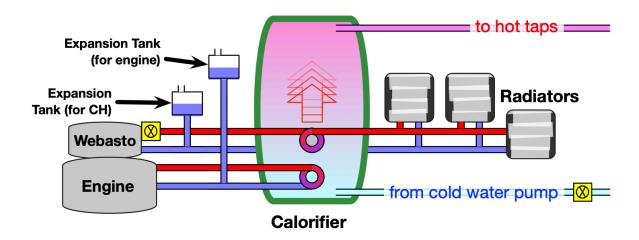

Victorious's hot water and central heating system revolves around the Calorifier which is essentially an insulated hot water storage tank under the bed at the back of the boat.

The calorifier can use two sources of heat: the engine when it is running, and the Webasto diesel-powered heater. Either can heat a tank of water in about 30 minutes. (An unserviceable 230V immersion heater element has been disconnected since 2024.)

The central heating system and the engine cooling system use the same fifty-fifty mix of blue antifreeze (ethylene glycol) and water, which needs to be regularly topped up to the marked levels. The engine coolant expansion tank is in the engine bay on the bulkhead on the port side and the central heating coolant expansion tank is in the tool locker at the stern on the starboard side.

There is a cut-off valve for the radiators under the vanity unit in the rear cabin. This shuts off all the radiators except the bathroom radiator - which is required to shed any excess heat from the system.

The Webasto heater is unsophisticated and is either ON and supplying heat and circulating it through the calorifier and radiators, or OFF.

A thermostat has been added to provide more control, as well as being used to turn the heating on or off manually, it can switch on the Webasto heater when the temperature falls below the chosen setting. **To switch on**, turn the gauge anti-clockwise until you hear the switch 'click' on. **To switch off**, turn the gauge clockwise to zero or until you hear the switch 'click' off.

# Bedding and towels aboard Victorious

Victorious's fixed bed can be extended using the pull-out sections of the bed above the cupboards below the mattress, and allowing the bolster to take up the space between the mattress and the outside wall.

Aboard are enough pillows and duvets for each of the three sleeping areas: the main bedroom, the dinette make-up bed, and the saloon make-up bed.

The dinette bed uses the cushions that make up the dinette.

The saloon make up bed uses the base cushions that are there, plus two more cushions that can be found in the storage area beneath the seating there.

At least three (3) double duvets are stored under the dinette seat closest to the galley.

At least six (6) pillows are stored under the dinette seat closest to the saloon.

Pillows and duvets are stored in vacuum bags to prevent them from getting damp, and to ensure that they do not take up too much room. Please seal them in the vacuum bags and squish, or vacuum, or pump out as much air as possible before returning to storage. New duvets and pillows are purchased each winter and the old ones are disposed of.

Cover the rear bedroom mattress and bolster with the supplied bed cover when you leave the boat.

Please bring your own sheets and duvet and pillow covers with you to protect these pillows and duvets if you use them. If any pillows or duvets are soiled during your time aboard please dispose of them and replace them with new items.

Please also bring your own towels with you (including tea towels), the only towels aboard are those left behind by other owners and may be found in the **Lost & Found** storage area below the saloon seating closest to the stove.

There are some folding stools and seats in the storage area below the saloon seating. Please place them back in here if you use them.

Please keep the drawers and wardrobes free from any personal clutter, remember that this is a shared space and others might not have the same needs or ideas about decor as yourself.

# **Cleaning Victorious**

When leaving Victorious on the last day of your stay it must be cleaned so that it is ready for use by the next syndicate member.

There are two options available:

1. Use the services of a local cleaner.

# If you have had pets on board then you should engage a cleaner to do a comprehensive interior 'pet-clean'.

You should arrange this in advance of returning the boat, before you take over at turn-round. Please make sure the cleaning is done before the time you say the boat will be available for the next syndicate member.

The contact details and prices for cleaning vary from marina to marina, so please consult the **marina services** section for more details.

2. Clean the boat yourselves.

#### **Recommended cleaning procedures:**

Cleaning the interior and exterior of the boat should take no more than a couple of hours if tackled by two or more people.

This section was previously organised into the separate areas of the boat. Now it is organised in an approximate order of operations: washing up, tidying, dusting, vacuuming and wiping, from bow to stern.

#### 1. Interior Cleaning:

1.1. Wash, dry and put away any cutlery, crockery, cooking implements, glasses and containers you have used during your stay.

Be sure to clean the microwave dish and oven grill pan.

#### 1.2. Tidy the boat:

- 1.2.1. Empty any ashes from the stove and clean it with a soft cloth.
- 1.2.2. Tidy away the crockery, cutlery, glasses etc.
- 1.2.3. Tidy any books, DVD's etc into the saloon storage.
- 1.2.4. Store any bedding used in the relevant storage areas, in the plastic bags provided.
- 1.2.5. Demount and stow the saloon table, the small table and their legs.
- 1.2.6. Mount the dinette table on its support and leg.
- 1.2.7. Throughout the boat, remove any personal items from all of the storage areas.
- 1.2.8. Ensure all the storage areas are tidy, and clean them if necessary.
- 1.2.9. Empty and wipe clean the fridge, turn it off and wedge the door open.
- 1.2.10. Empty and wipe the kitchen pedal bin. Replace the liner.
- 1.2.11. Empty and wipe the bathroom pedal bin. Replace the liner.

- 1.2.12. Empty the bathroom cabinet, and remove any toiletries from the shower.
- 1.2.13. Push in the rear cabin bed slide, and place the throw-over bed cover over the mattress and mattress extension.

#### 1.3. Remove dust, dirt and grime:

- 1.3.1. Wipe the area around the stove with a damp cloth.
- 1.3.2. Use a duster on the light fittings throughout the boat.
- 1.3.3. Use a duster on the radiators and skirting boards throughout the boat.
- 1.3.4. Dust and clean the fruit bowl and place it on the dining table.
- 1.3.5. Use a damp cloth or fabric cleaner to remove any marks on the upholstery.
- 1.3.6. Remove any marks on the 'Novasuede' wall covering using the advice below.
- 1.3.7. Clean the oven and the hob.
- 1.3.8. Wipe clean the tiled areas of the kitchen.
- 1.3.9. Clean the kitchen sink.
- 1.3.10. Clean the bathroom sink and taps.
- 1.3.11. Dust the bathroom shelves.
- 1.3.12. Clean the rear cabin sink and taps.

#### Cleaning the 'Novasuede' wall covering:

Most marks can be removed by simply spot-cleaning with warm water. Persistent marks should be tackled with a mild laundry soap, or a solution of white vinegar.

Greasy marks may respond to white spirit, or specialist upholstery cleaners.

Dab gently at marks until they come clean, please do not wipe or smear them.

#### 1.4. Vacuum and clean the floor:

- 1.4.1. Vacuum the saloon, dinette, connecting corridor and the rear cabin floors.
- 1.4.2. Vacuum inside the rear cabin wardrobe.
- 1.4.3. Immediately empty the contents of the vacuum cleaner outside the boat into a plastic bag for disposal, and stow the vacuum cleaner in the rear cabin wardrobe.
- 1.4.4. Use cleaning fluid, and a wipe, cloth or mop to clean the kitchen floor, bathroom floor, and the area below the rear cabin steps.

#### 1.5. Wipe surfaces clean:

- 1.5.1. Polish the shelves and wooden surfaces including the tables in the saloon and dinette area.
- 1.5.2. Polish the shelves and wooden surfaces in the rear cabin.
- 1.5.3. Wipe clean the shelf above the oven.
- 1.5.4. Wipe clean the interior of the microwave oven.
- 1.5.5. Use an antibacterial cleaner to wipe the kitchen surfaces.
- 1.5.6. Clean the toilet and surrounds with warm soapy water.

#### Do NOT use bleach or toilet blue in the toilet bowl.

- 1.5.7. Use a shower cleaner or warm soapy water to wipe clean the interior of the shower and the shower door.
- 1.5.8. Pump out any remaining water in the shower compartment, and wipe the shower tray clean of any debris.
- 1.5.9. Polish the bathroom mirror, and the mirror above the rear cabin vanity.

#### 2. Exterior Cleaning:

- 2.1. Ensure all tools are put away in the tool storage or inside the boat.
- 2.2. Close all windows and ensure the front cratch cover is in place.
- 2.3. The quickest and most effective way to clean the outside roof and sides is with two buckets of water, one containing warm soapy water and the other cold clean water. Using a cloth or sponge soaked in the warm soapy water, wash the external paintwork, and then rinse this area with a second cloth or sponge, which has been soaked and wrung out in the cold water. The front well deck, the rear semi-trad area and rear counter area can be washed in the same way. A mop should be used for the floor areas.
- 2.4. Please wipe any marks from the chromework and the tiller arm.
- 2.5. Please polish any brasswork, including the roof side step, the water and pump-out covers, the diesel filler cap, the diesel tank vent and the chimney bands.
  - 2.5.1. Optionally: Rub the brass slides of the rear hatch with candle wax or beeswax to lubricate them.
- 2.6. Use a spray window cleaning fluid to clean the windows, inside and out.
- 2.7. Coil the centre ropes and the ends of the mooring lines neatly.
- 2.8. Please wipe down the solar panels with a damp cloth.
- 2.9. Please ensure the rear cover is properly in place.

_	OI .	A · I I	
~	( IDanina	Vide and	Matarialci
J.	Cicariiriu	Alus allu	Materials:

Although a limited supply of cleaning material may be left on the boat, you may w	vish
to bring with you your own cleaning 'kit', or purchase them during your stay.	

orın	g with you your own cleaning 'kit', or purchase them during your st
	Window cleaning spray with soft cloths
	Furniture spray polish with dusters
	Cream cleaner for sinks and wash basins
	1001 or stardrops furniture cleaner
	Metal Polish (Brasso and/or Bar Keepers Friend)
	Tile/Shower Cleaner

# **Example Turn-round Sheet**

#### **VICTORIOUS TURN-ROUND REPORT**

Please complete spaces with text/number/tick as appropriate

Post or scan top sheet to Treasurer, add duplicate to file and leave on table

BASE	OWNER	TURN-R'D DATE	<b>ENGINE HOURS</b>
Swanley Bridge	J Smith	20 Feb 2020	12345.6

GAS BOTTLES	TOILET PUMPOUT +BLUE ADDED	FRESH WATER	DIESEL FUEL
CHANGED		TANK FILLED	FILLED
1	yes	yes	yes

#### **OWNER'S CHECKS**

Horn Operation	<b>V</b> .	Engine Start/Stop	
Headlight Operation		Bilge Pump Operation	
Water Temperature (Console)	<b>/</b>	Oil Pressure (Console)	
Coolant Level (Engine)	<b>V</b>	Engine Oil Level (Dipstick)	
Stern Tube Greaser		Water in Engine Bilge	none
Alternator and belts	<b>~</b>	Fuel Leaks	none
Bow Thruster Header Tank (Cratch)	<b>/</b>	Water in Cabin Bilge	minimal
Central Heating Header Tank		Landline connected & charging	

	$\overline{}$		
Bedding Check:	OK ,	Items Replaced	

INTERIOR CLEANING	-COMPLETED BY OWNER	or	LOCAL SERVICE
EXTERIOR CLEANING	COMPLETED BY OWNER	or	LOCAL SERVICE

Description of:- Fault/Failure or Items requiring replacement or renewal		
No.	Description	Action Taken (Owner/Engineer)
1	Stern gland greaser was empty on Wednesday	Refilled, bought a new tub of K99 grease
2	Lost one pint glass overboard, Friday night	Replaced (from local shop)
3		
4		
5		
6		

# Turn-round Checklist

## **Before leaving Victorious**

	The day before leaving, contact the next people due to be on board and let them know when you'll be leaving.
	Refuel, pump-out, and clean the boat. Place all bedding back into storage.
	Refill the water tank.
	Check and replace any empty gas bottles.
	Complete the 'Turn-round Sheet' form on the website.
	Make sure the fridge is empty, switched off, and the fridge door propped open.
	Switch off all other internal electrics.
	Check the level of the central heating coolant expansion tank, and top it up if necessary.
	Turn the central heating control clockwise to between 0° and 5°.
	Make sure the electric hook-up is connected (and working.)
	Ensure you have taken all your personal belongings off the boat.
	Please ensure all covers are properly in place.
	Lock the front doors, the boat's stern hatch, and the tool locker using the key and combination padlocks provided.
On joi	ning Victorious
	Turn on any internal electrical systems required.
	Check the level of the central heating coolant expansion tank, and top it up if necessary.
	Rotate the central heating control anti-clockwise to turn it on, if it is required.
	Read the previous users' Turn-round Sheets and/or the Maintenance Issues section of the website.
	Unpack any bedding required from the storage areas.
	Check the engine, <u>as per the maintenance section.</u>